


Operation

Power

With the toggle Power Switch set to the Off position, Directional Selection Switch set to the neutral/brake selection (BRK), and Speed Control Dial set to minimum setting (0) Plug the power supply cord into a properly wired and grounded outlet.

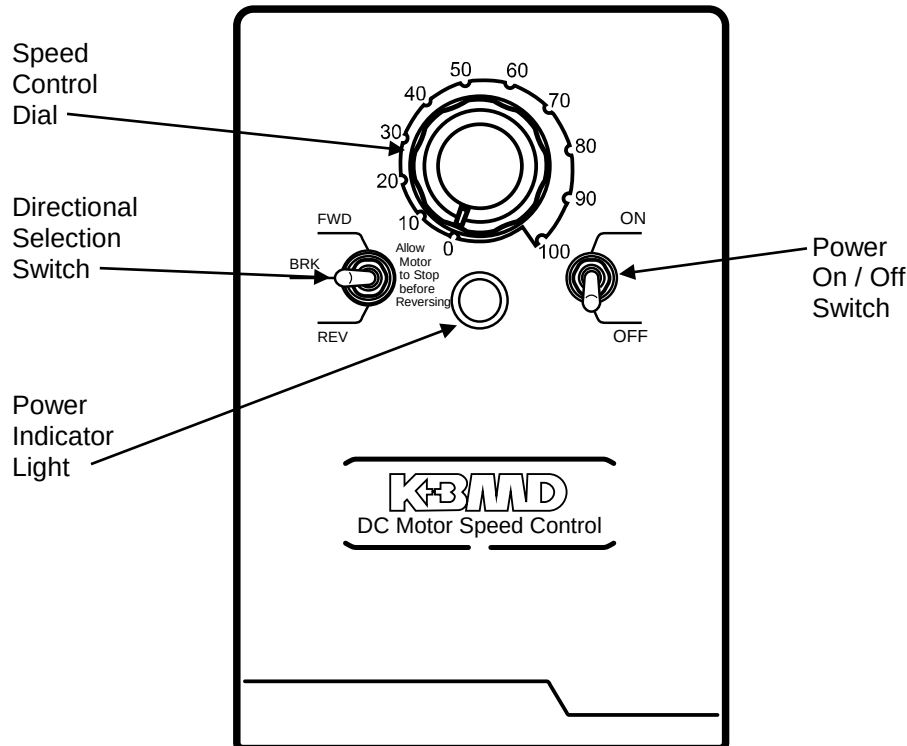

Toggle the Power Switch to the On position. The Power indicator light will illuminate.

CAUTION! When the power is turned on keep clear of the rotating tabletop.


Select the direction in which the table will rotate, using the Directional Selection

CAUTION! When changing the direction of tabletop rotation, turn the speed down to zero-minimum and set the Directional Selection switch to the center BRK position and allow the tabletop to come to a full stop before selecting the opposite direction.

Gradually increase the rotation speed using the Speed Control Dial to adjust the tabletop rotation to the desired speed.

Control Box

The accumulation table control box is held in place by magnets and is repositionable. It can be repositioned anywhere along the metal surface of the accumulation table frame side rail where it will be most convenient for operation.

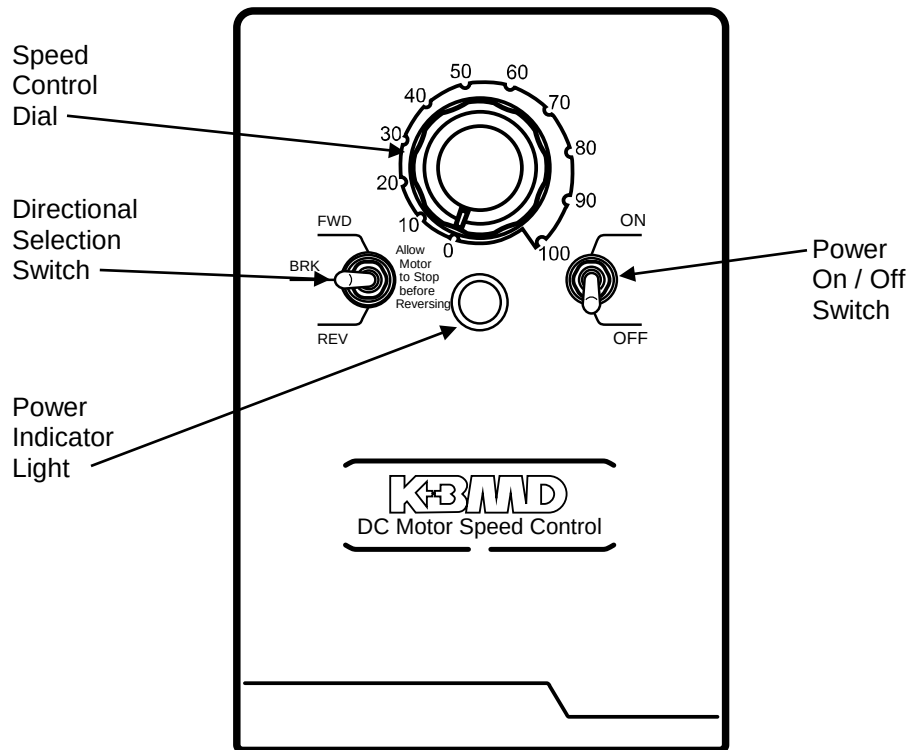

Power On / Off Switch

The Power On / Off is a toggle switch to turn the power on or off. Power is switched off when the switch is in the down position: power is on when the switch is in the up position. Switch the power on by flipping the lever up; switch the power off by flipping the lever down.

Power Indicator Light

Illuminates when power is On; is unlit when power is Off.

Directional Selection Switch

This is a three-position FWD/BRK/REV toggle switch to set the rotation direction in forward or reverse. Always decrease speed and set the toggle to the center BRK setting and allow the table to come to a full stop before changing direction to forward or reverse.

Speed Control Dial

Adjust accumulation table speed using the Speed Control Dial to bring the accumulation table to the required speed. The level gradations from 0 to 100 represent percentage from minimum (0%) to maximum (100%) available speed and are otherwise arbitrary and likely will not correspond to any specific units of angular velocity.

To stop the accumulation table, turn the Speed Control Dial to minimum setting (0), and toggle the Directional Selection Switch to BRK. The accumulation table will slow down and stop. Turn the Power Switch to the Off position to turn off power.